




YAMAHA

YFZ350T

Service Manual

INDEX


GENERAL INFORMATION	
	GEN INFO 1
PERIODIC INSPECTIONS AND ADJUSTMENTS	
	INSP ADJ 2
ENGINE OVERHAUL	
	ENG 3
COOLING SYSTEM	
	COOL 4
CARBURETION	
	CARB 5
CHASSIS	
	CHAS 6
ELECTRICAL	
	ELEC 7
APPENDICES	
	APPX 8

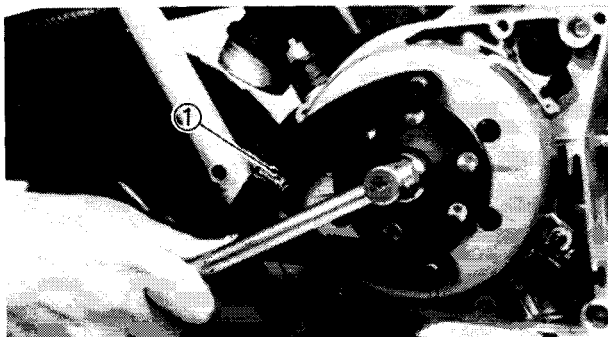

2. Remove:

- Nut (Magneto)

Use the Rotor Holding Tool ① (YU-01235) to lock the magneto.

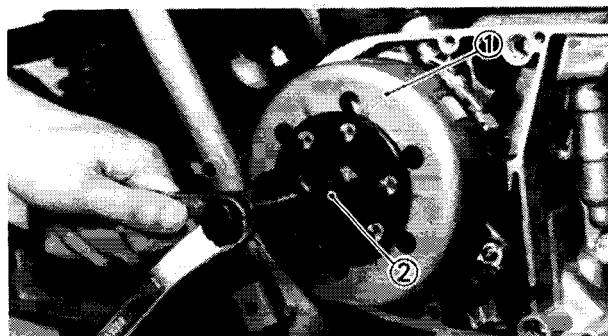


3. Remove:

- CDI magneto ①


Use the Rotor Puller ② (YM-01189).

- Woodruff key

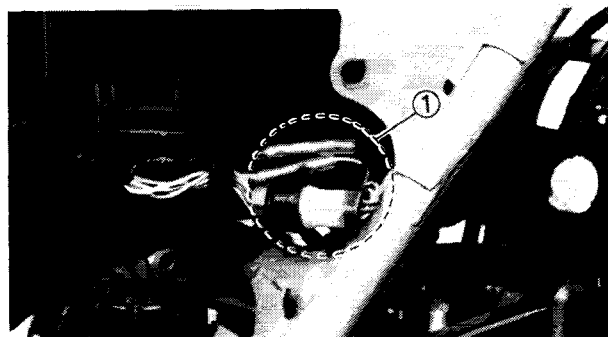

4. Disconnect:

- Magneto leads ①

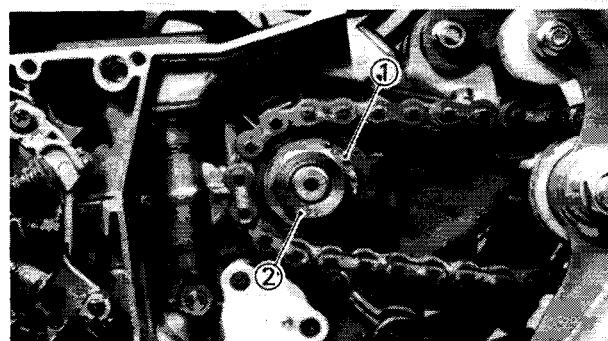**DRIVE CHAIN**

1. Bend down lock tab ①.


2. Put the transmission in gear and apply parking brake.

3. Loosen:

- Nut (Drive sprocket) ②

4. Remove:

- Drive sprocket
- Drive chain

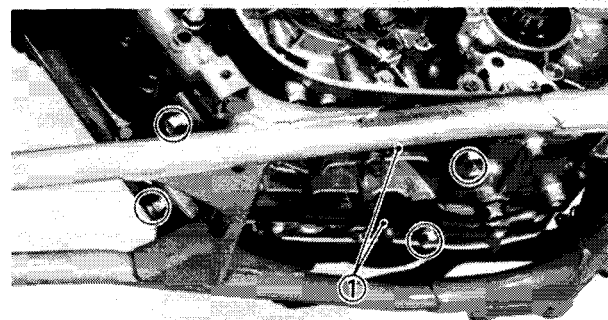**TENSION ROD**

1. Remove:

- Tension rods ①