


INSTRUMENT AND CONTROL FUNCTIONS

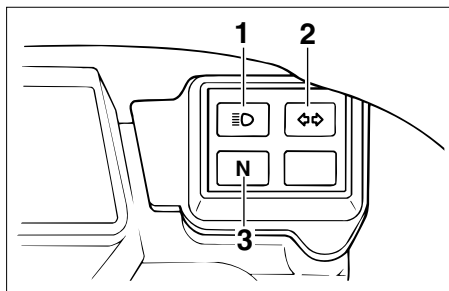

1. High beam indicator light “≡D”
2. Turn signal indicator light “↔”
3. Neutral indicator light “N”

EAU00056

Indicator lights

EAU00063

High beam indicator light “≡D”

This indicator light comes on when the high beam of the headlight is switched on.

EAU00057


Turn signal indicator light “↔”

This indicator light flashes when the turn signal switch is pushed to the left or right.

EAU00061

Neutral indicator light “N”

This indicator light comes on when the transmission is in the neutral position.

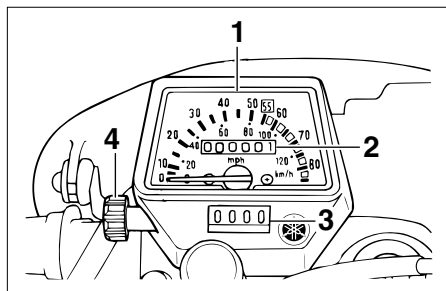


1. Speedometer
2. Odometer
3. Tripmeter
4. Reset knob

EAU00095

Speedometer unit

The speedometer unit is equipped with a speedometer, an odometer and a tripmeter. The speedometer shows riding speed. The odometer shows the total distance traveled. The tripmeter shows the distance traveled since it was last set to zero with the reset knob. The tripmeter can be used to estimate the distance that can be traveled with a full tank of fuel. This information will enable you to plan future fuel stops.

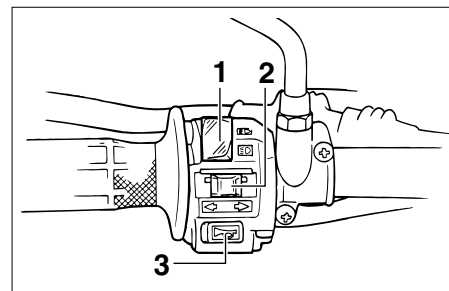

1. Dimmer switch “≡D/≡D”
2. Turn signal switch “↔”
3. Horn switch “🔊”

EAU00118

Handlebar switches

EAU03888

Dimmer switch “≡D/≡D”


Set this switch to “≡D” for the high beam and to “≡D” for the low beam.

EAU03889

Turn signal switch “↔”

To signal a right-hand turn, push this switch to “↔”. To signal a left-hand turn, push this switch to “↔”. When released, the switch returns to the center position. To cancel the turn signal lights, push the switch in after it has returned to the center position.

PERIODIC MAINTENANCE AND MINOR REPAIR

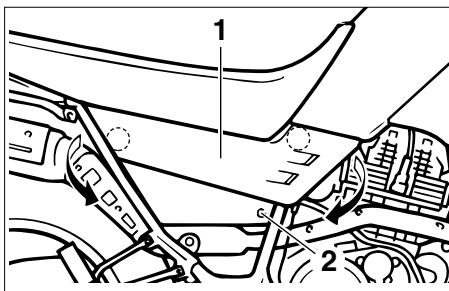

1. Panel B
2. Screw

EAU00488


Panel B

To remove the panel

Remove the screw, and then pull the panel off as shown.

To install the panel

Place the panel in the original position, and then install the screw.

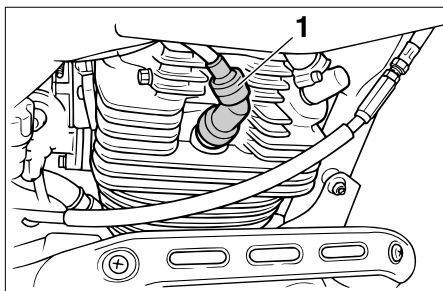

1. Spark plug cap


EAU01833

Checking the spark plug

The spark plug is an important engine component, which is easy to check. Since heat and deposits will cause any spark plug to slowly erode, the spark plug should be removed and checked in accordance with the periodic maintenance and lubrication chart. In addition, the condition of the spark plug can reveal the condition of the engine.

To remove the spark plug



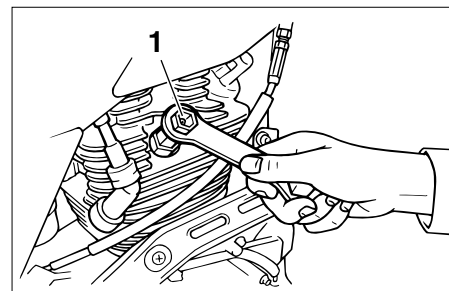





1. Remove the spark plug cap.



1. Spark plug wrench

2. Remove the spark plug as shown, with the spark plug wrench included in the owner's tool kit.

 INDEX

GENERAL INFORMATION	 GEN INFO 1
SPECIFICATIONS	 SPEC 2
PERIODIC INSPECTION AND ADJUSTMENT	 INSP ADJ 3
ENGINE OVERHAUL	 ENG 4
CARBURETION	 CARB 5
CHASSIS	 CHAS 6
ELECTRICAL	 ELEC 7
TROUBLESHOOTING	 TRBL SHTG 8

FRONT FORK INSPECTION	3-43
FRONT FORK ADJUSTMENT	3-43
REAR SHOCK ABSORBER ADJUSTMENT	3-45
RECOMMENDED COMBINATIONS OF THE FRONT FORK AND THE	
REAR SHOCK ABSORBER SETTINGS	3-47
TIRE INSPECTION	3-48
WHEEL INSPECTION	3-50
SPOKES INSPECTION AND TIGHTENING	3-51
CABLE INSPECTION AND LUBRICATION	3-51
LEVER AND PEDAL LUBRICATION	3-52
SIDESTAND LUBRICATION	3-52
REAR SUSPENSION LUBRICATION	3-52
ELECTRICAL	3-53
BATTERY INSPECTION	3-53
FUSE INSPECTION	3-59
HEADLIGHT BEAM ADJUSTMENT	3-61
HEADLIGHT BULB REPLACEMENT	3-61

CHAPTER 4. ENGINE OVERHAUL

ENGINE REMOVAL	4-1
SEAT, FUEL TANK AND COVER	4-1
ENGINE GUARD	4-1
ENGINE OIL	4-1
BATTERY LEADS	4-2
CANISTER (CALIFORNIA ONLY)	4-2
EXHAUST PIPE AND MUFFLER	4-2
CRANKCASE VENTILATION HOSE AND CARBURETOR	4-3
HORN, CABLES AND LEADS	4-3
DRIVE CHAIN	4-5
ENGINE REMOVAL	4-6
ENGINE DISASSEMBLY	4-8
CYLINDER HEAD, CYLINDER AND PISTON	4-8
ROTOR AND STARTER DRIVES	4-12
OIL FILTER	4-14
CLUTCH, OIL PUMP AND BALANCER GEAR	4-15
SHIFT SHAFT	4-18
CRANKCASE (RIGHT)	4-19
BALANCER, TRANSMISSION AND SHIFTER	4-20
CRANKSHAFT	4-21
ROCKER ARM AND CAMSHAFT	4-22
VALVES	4-23

YB3A3019

LEVER AND PEDAL LUBRICATION

Lubricate the lever and pedal at their pivoting points.



Recommended lubricant:
Yamaha Chain and Cable Lube
or SAE 10W30 motor oil


YB3A5000

SIDESTAND LUBRICATION

Lubricate the sidestand at pivoting points.



Recommended lubricant:
Yamaha Chain and Cable Lube
or SAE 10W30 motor oil

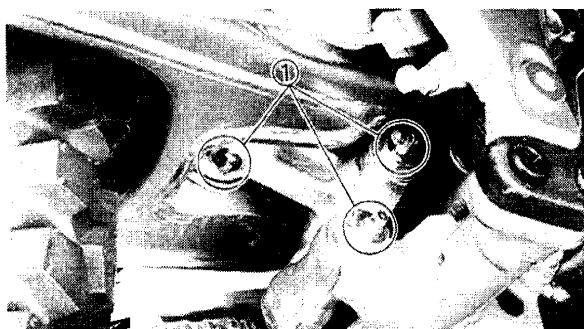

YB2A2005


REAR SUSPENSION LUBRICATION

Lubricate the swingarm and relay arms at their pivoting points.



Recommended lubricant:
Lithium soap base grease

① Grease nipple

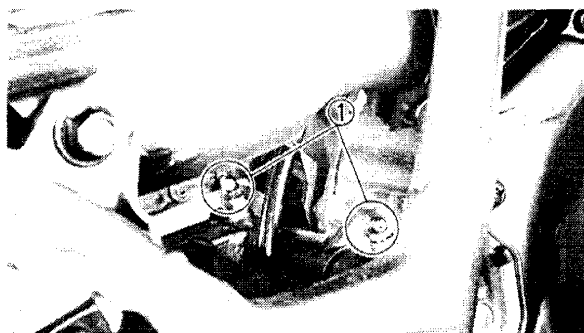



BALANCER AND TRANSMISSION

- | | | |
|------------------|-------------------|-------------------|
| ① Drive sprocket | ⑪ Bearing | ⑳ Balancer weight |
| ② Oil seal | ⑫ Oil seal | ㉑ Bearing |
| ③ Bearing | ⑬ Bearing | |
| ④ 2nd wheel gear | ⑭ 2nd pinion gear | |
| ⑤ Drive axle | ⑮ 5th pinion gear | |
| ⑥ 5th wheel gear | ⑯ 3rd pinion gear | |
| ⑦ 3rd wheel gear | ⑰ 4th pinion gear | |
| ⑧ 4th wheel gear | ⑱ Main axle | |
| ⑨ 6th wheel gear | ㉒ Bearing | |
| ⑩ 1st wheel gear | ㉓ Bearing | |

